


RE-PROGRAMMING YOUR REMOTE CONTROL: OPTION 1

1. Find your TV's manufacturer in the list below. Note the various 4-digit codes associated with your manufacturer.
2. Press and release the **TV** button.
3. Press and hold **SETUP** button until the **TV** button flashes twice.
4. Enter the first 4-digit code from the list of TV codes associated with your TV's manufacturer.
 - a. If the correct code is entered, the **TV** button will flash twice.
 - b. If the code that is entered is incorrect or does not work, the **TV** button will display a long flash. If this happens, repeat steps 2-4 with the next code in the list.
5. Press and release the **STB** button, and test all functions (access the Guide and Menu, channel up/down, volume up/down, etc.).
6. If you find that some functions do not work, repeat the process with the next code in the list.
7. If none of the codes work, follow the steps described within OPTION 2 on the following page to use your remote to "search" your TV for the correct code.

TV Brand	TV Codes
Insignia	2049 1641 1326 1564 1423 2002 1785 1892 2184 2417 2751 0171 0463 2088 1963 1660 1517 1385
LG	1423 2731 2358 2424 0178 3397 1265 2834 3098 2612 0017
Panasonic	1480 1291 0250 0650 2264 1927 1924 1947 0051 1941 1310 1271 1946
Philips	1454 1867 2372 1744 1455 2374 2597 1866 0690 0054 2704 1394 0171 1365 1944 1990 2902
RCA	1447 2746 2434 2932 2247 2187 0047 1781 0093 3577 3147 2855 2002 1959 1547 1385 1347 0679 0051 1661 0090
Samsung	2051 0812 0702 0060 1060 0766 0814 1959 2596 0650 0178 0056
Sansui	0171 0463 1463 1670 1892 1904 1938 3540 3564
Sanyo	1142 0154 1362 0054 0088
Sharp	2360 0818 0093
Sony	0810 0000 1300 0834 1685 1904
TCL	2434 3183 1756
Toshiba	1524 1656 2724 0156 1156 0822 1256 2006 0060 0154 1265 2684 1959 1945 1704 0650 1369
Vizio	1758 3758 2757 3358 2512 1756 0864 0885

RE-PROGRAMMING YOUR REMOTE CONTROL: OPTION 2

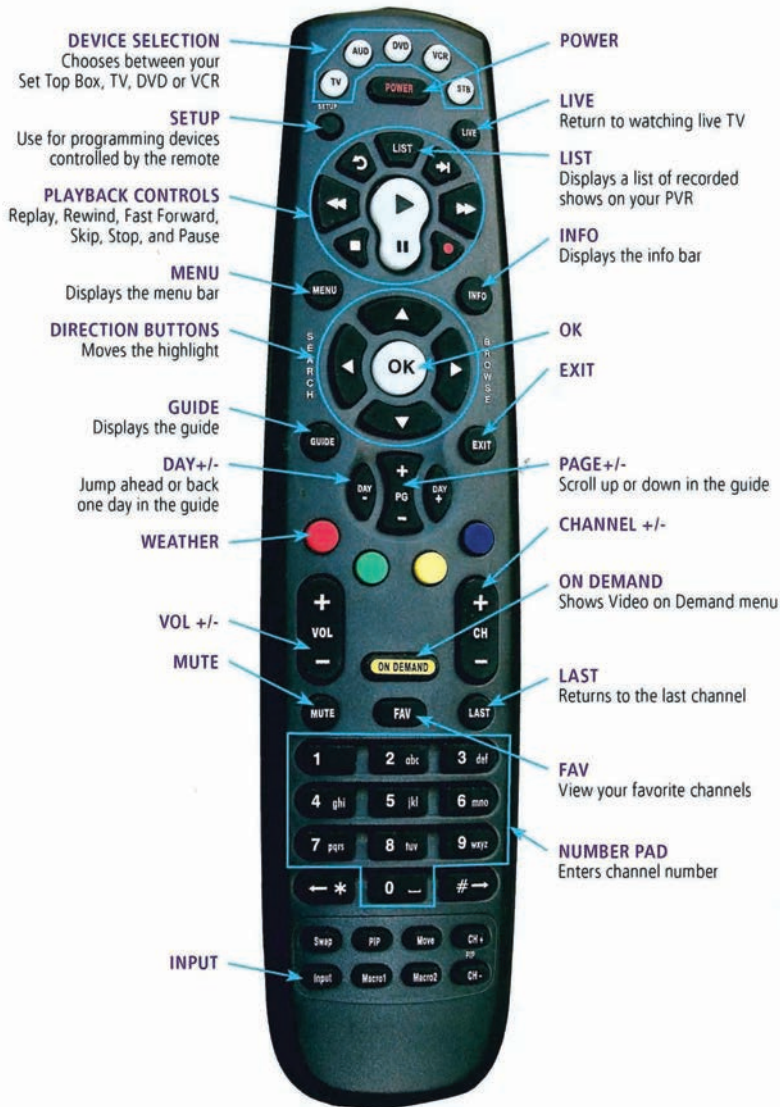

NOTE:

If the codes listed within OPTION 1 do not work with your TV, follow the steps below to use your CL Tel TV remote to "search" for the correct code.

SETTING THE MASTER POWER KEY

1. Press & Release the **STB** button.
2. Press & Hold the **SETUP** button until the **STB** button blinks 2 times, then release the **SETUP** button.
3. Press **9 9 5**.
4. Press & Release the **POWER** button 1 time.
5. Press the **TV** button.
6. Press the **STB** button.
7. Press & Hold the **SETUP** button until the **STB** button blinks 2 times, then release the **SETUP** button.

SEARCHING FOR YOUR TV CODE

1. Turn TV on.
2. Press & Release the **TV** button.
3. Press & Hold the **SETUP** button until the **TV** button blinks 2 times, then release the **SETUP** button.
4. Press **9 9 1**.
5. Aim the remote at the TV & press the **POWER** button 1 time.
6. Press & Release the **CH+** button repeatedly until the TV turns off
7. Press the **POWER** button.
8. Press & Hold the **SETUP** button until the **TV** button blinks 2 times, then release the **SETUP** button.